
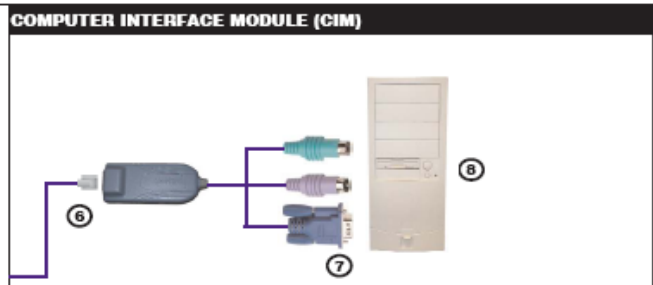
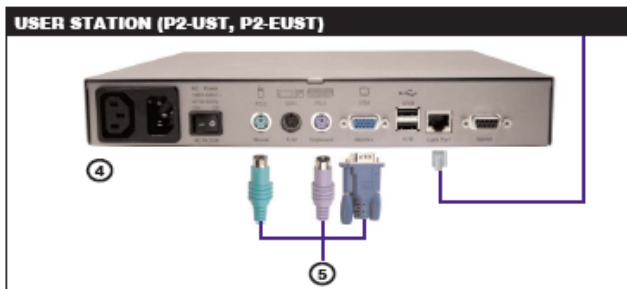


Rev. E December 2005 255-30-6010

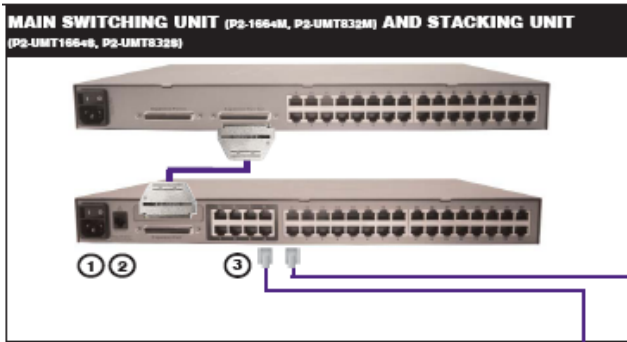

MULTI-PLATFORM CIM TABLE							
Part	PS/2	Serial	USB	Serial/Smart Port	Video	Local Ports	Front Panel Upgrade*
P2C-MP162	X				HDMI		X
P2C-MP162DUAL	X				HDMI		X
P2C-MU2502		X	X		HDMI		X
P2C-MUP16				X	HDMI		X
USMVC	X				HDMI	X	
UMVMP	X				HDMI		
UMVMP-c330	X				HDMI		
UMVMP-c330	X				HDMI	X	
UMVMP	X				HDMI		
P2C-M-SLN		X			HDMI		X
P2C-M-SLSD		X	X		HDMI		X
USMVPK		X			TMDS		
USMVC		X			1394/FireS	X	
P2C-M-UGR			X		HDMI		X
ALPUSBC			X		HDMI	X	
ALATC				X		X	

\*Front Panel Upgrade to be performed in conjunction with Raritan.

## Physical Connections

**IMPORTANT:** All computers and Paragon II components must be powered OFF prior to installation.

1. Connect power cord to the Main Switching Unit.

## Optional Stacking Support

- a. Connect power cord to a Stacking Unit. - Connect one end of a stacking cable to the "Expansion Port Out" on the back of the Stacking Unit. Connect the other end of the cable to the "Expansion Port" on the Main Switching Unit.

**Note:** If installing the P2-UMT1664M, use two stacking cables. Connect one stacking cable to the P2-UMT1664S "Out A" port and connect the other end to the lower "Expansion Port In" on the P2-UMT1664M. Connect the other stacking cable to the P2-UMT1664S "Out B" port and connect the other end to the upper "Expansion Port In" on the P2-UMT1664M.

- b. Power ON all switching units.

- c. On the front panel LCD of the Main Switching Unit: - Press the FUNC button and use the  or  keys to select "Stacking Support." Press the ENT button.- Select the total number of Stacking Units desired (3 maximum for the P2-832M, 1 maximum for the P2-1664M). Press the ENT button.

- d. On the front panel LCD of the Stacking Unit: - Press the FUNC button and use the  or  keys to select "Set Stack ID." Press the ENT button. - Assign the Stacking Unit ID using the  or  keys. Each Stacking Unit for the P2-832M MUST HAVE A UNIQUE ID (1-3). Press the ENT button.

e. Power OFF all units

f. Power ON the stacking unit

2. Power ON the Main Switching Unit.

3. Connect one end of a Category 5e UTP cable to User Port #1 on the back of the Main Switching Unit. Connect the other end of the cable to the "Cat5 Port" on the back of the User Station (P2-UST or P2-EUST)

4. Connect a power cord to the User Station. Power ON the User Station.

5. Connect a PS/2/USB keyboard, mouse, and VGA monitor to the User Station. Power ON the monitor.

6. Connect one end of a Category 5e UTP cable to Channel Port #1 on the back of the Main Switching Unit (or Stacking Unit, if attached). Connect the other end of the cable to the RJ45 port on a Computer Interface Module (P2-CIM).

7. Connect the P2-CIM to server's keyboard, video, and mouse ports.

8. Power ON server.

## Administrative Setup

1. A Login Menu is displayed on the VGA monitor attached to the User Station. In the user name field type **admin** (all lowercase). Press the **Enter** key on your keyboard. In the password field type **raritan** (all lowercase). Press the **Enter** key.

2. The monitor displays an On-Screen User Interface (OSUI) Selection Menu with the connected server displayed in green.

3. Use the ↓ or ↑ keys to highlight the green channel and press the **Enter** key.

4. Normal computer access and operation indicates a successful connection.

**IMPORTANT:** A video gain adjustment is available to "focus" the video image (especially when using LCD flat panel monitors). Activate the OSUI by pressing the **ScrollLock** key twice rapidly. Use the numeric keypad + (plus) and - (minus) keys to adjust the video image until it appears in focus.

---

**Note:** Although users and servers can be located up to 1000 (304 m) apart, for optimal video quality, limit cable length between the Main Switching Unit and CIM to less than 100 feet (30.5 m). For good video quality, limit cable length between the Main Switching Unit and CIM to less than 500 feet (152 m).

---

For more detailed instructions, please consult the User Manual found on the enclosed CD-ROM or visit [www.raritan.com](http://www.raritan.com).

**If you have any questions during your Dominion KX installation, please consult the User Manual, and feel free to contact 3Plus Technology Sdn. Bhd.**

**Mr. C.W. Kuan**

**Telephone : +603 77818411**

**Hand Phone : +6 012 3228129**

**Mr. Liew Kim Ching**

**Telephone : +603 77818411**

**Hand Phone : +6 016 2097842**